



VERLEGEANLEITUNG

INSTALLATION INSTRUCTION


1

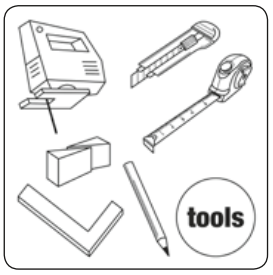


2

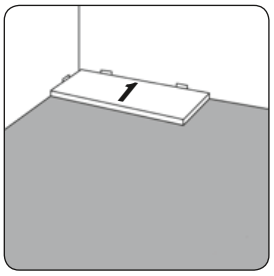


3

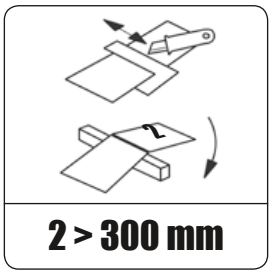


4

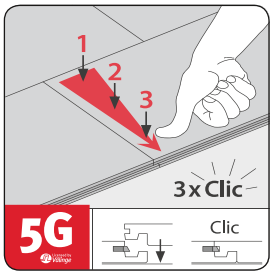


5

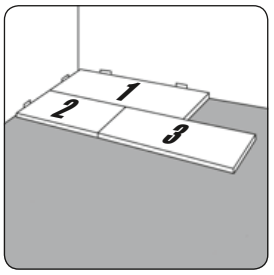


6

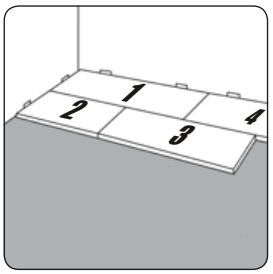


7

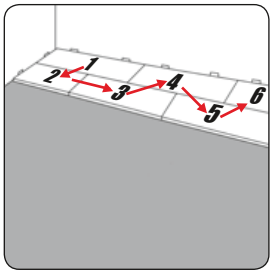


8

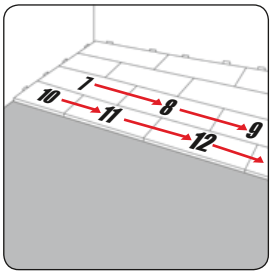


9

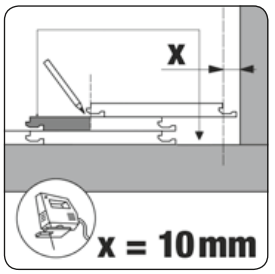

10

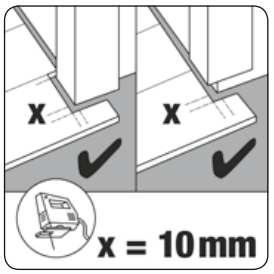


11

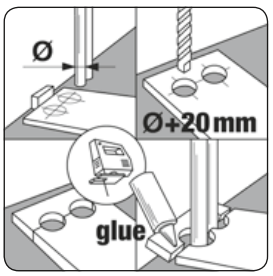

12




13

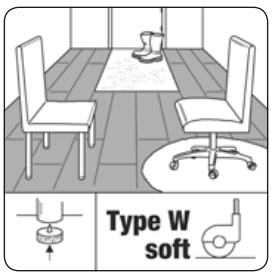

14




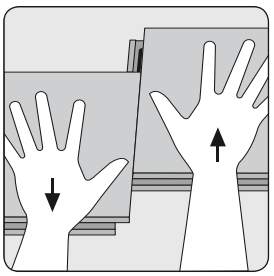

REMOVAL

MADE
IN
GERMANY

Profilor
BODENBELAG

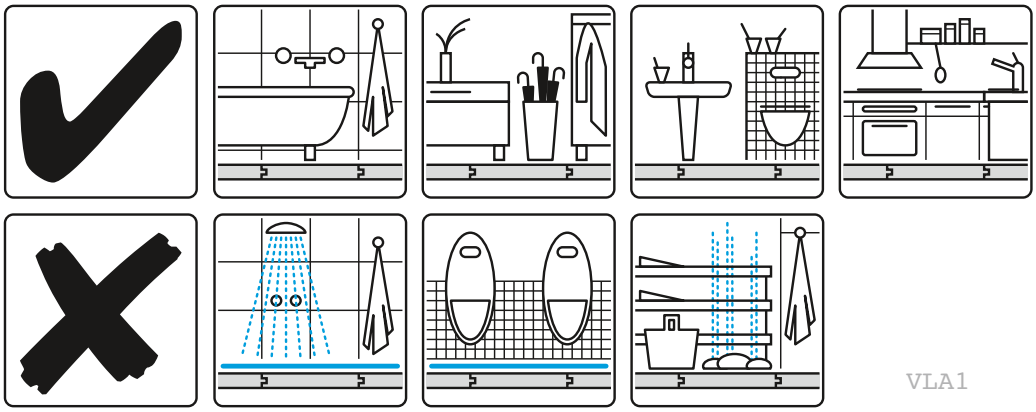

VLA1